


SOIC ADAPTER ASSEMBLING

Cut two pieces, of four pin from the 40 pin connector and insert them in the breadboard.

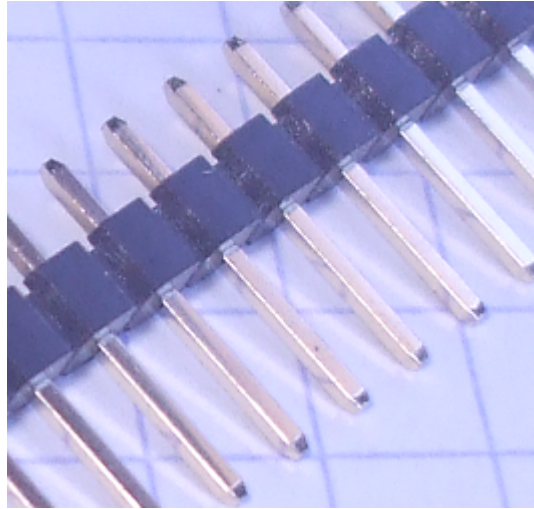

Insert now the adapter and solder the eight pins.

This method, ensure the pins after soldering, will be in the wright position.

